

## Functions

1. LED Mode indicator light
2. Mode button to connect to bluetooth  
(Pairing name *STADIUM*)
3. LED Stereo Link indicator light
4. Stereo Link button to connect another speaker
5. Bluetooth Volume control
6. Cross Link button On/Off
7. On/Off button input 1
8. Volume control input 1
9. XLR Connector for Microphone input 1
10. XLR Connector for Microphone input 2
11. Volume control input 2
12. 3.5mm Auxiliary input
13. 3.5mm Auxiliary input volume control
14. Equalizer: to control the tone level of high frequency at range - 12dB to + 12dB
15. Equalizer: to control the tone level of low frequency at range - 12dB to + 12dB
16. Master volume
17. XLR Line output
18. USB dongle input for wireless mics
19. USB wireless Mic LED lights up when in use
20. USB wireless Mic volume
21. Power Switch: To switch the unit on / off
22. Main power supply inlet

## Technical assistance

If you need assistance setting up or using your Stadium product now or in the future, call Stadium Support.


Australia

TEL: 03 – 8587 8898

FAX: 03 – 8587 8866

Mon-Fri 9am – 5pm AEST

This manual is considered correct at time of printing but is subject to change. For latest manuals and updates refer to the website.

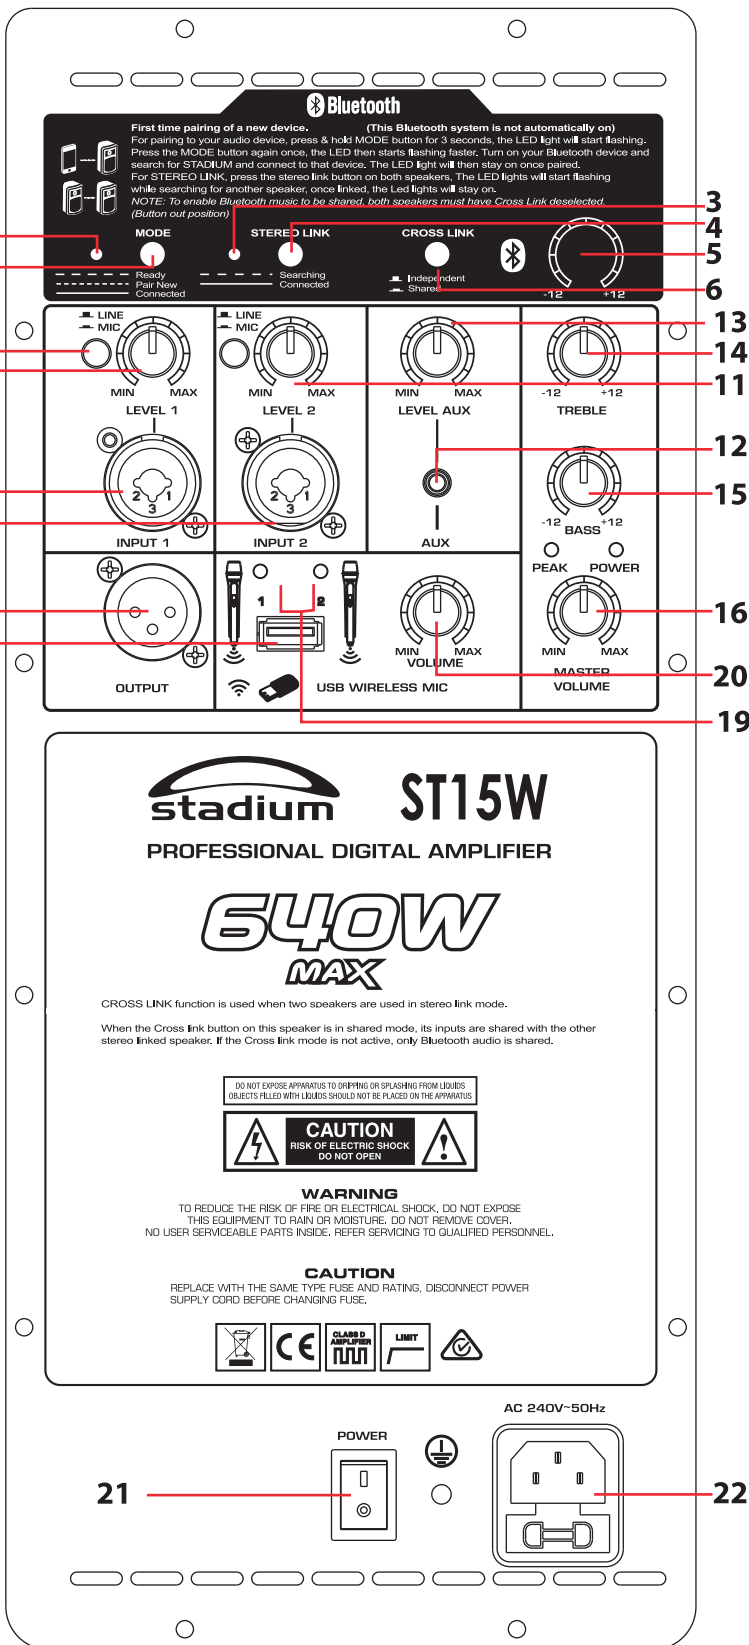

## Important note on BT Stereo operation.

Both speakers Cross Link buttons must be disengaged. The bluetooth stereo operation and Cross Link operations can not work at the same time.

Note regarding Cross Link: Whilst stereo BT does not have latency between the speakers there is a delay when sharing Cross Linked inputs.



Scan QR code for  
more products in  
the STADIUM range



[www.stadiumsound.com.au](http://www.stadiumsound.com.au)